


Types of IPv6 Addresses

Overview

IPv6 addresses consist of 128 bits (compared to 32 bits in IPv4) and are represented in hexadecimal notation separated by colons.

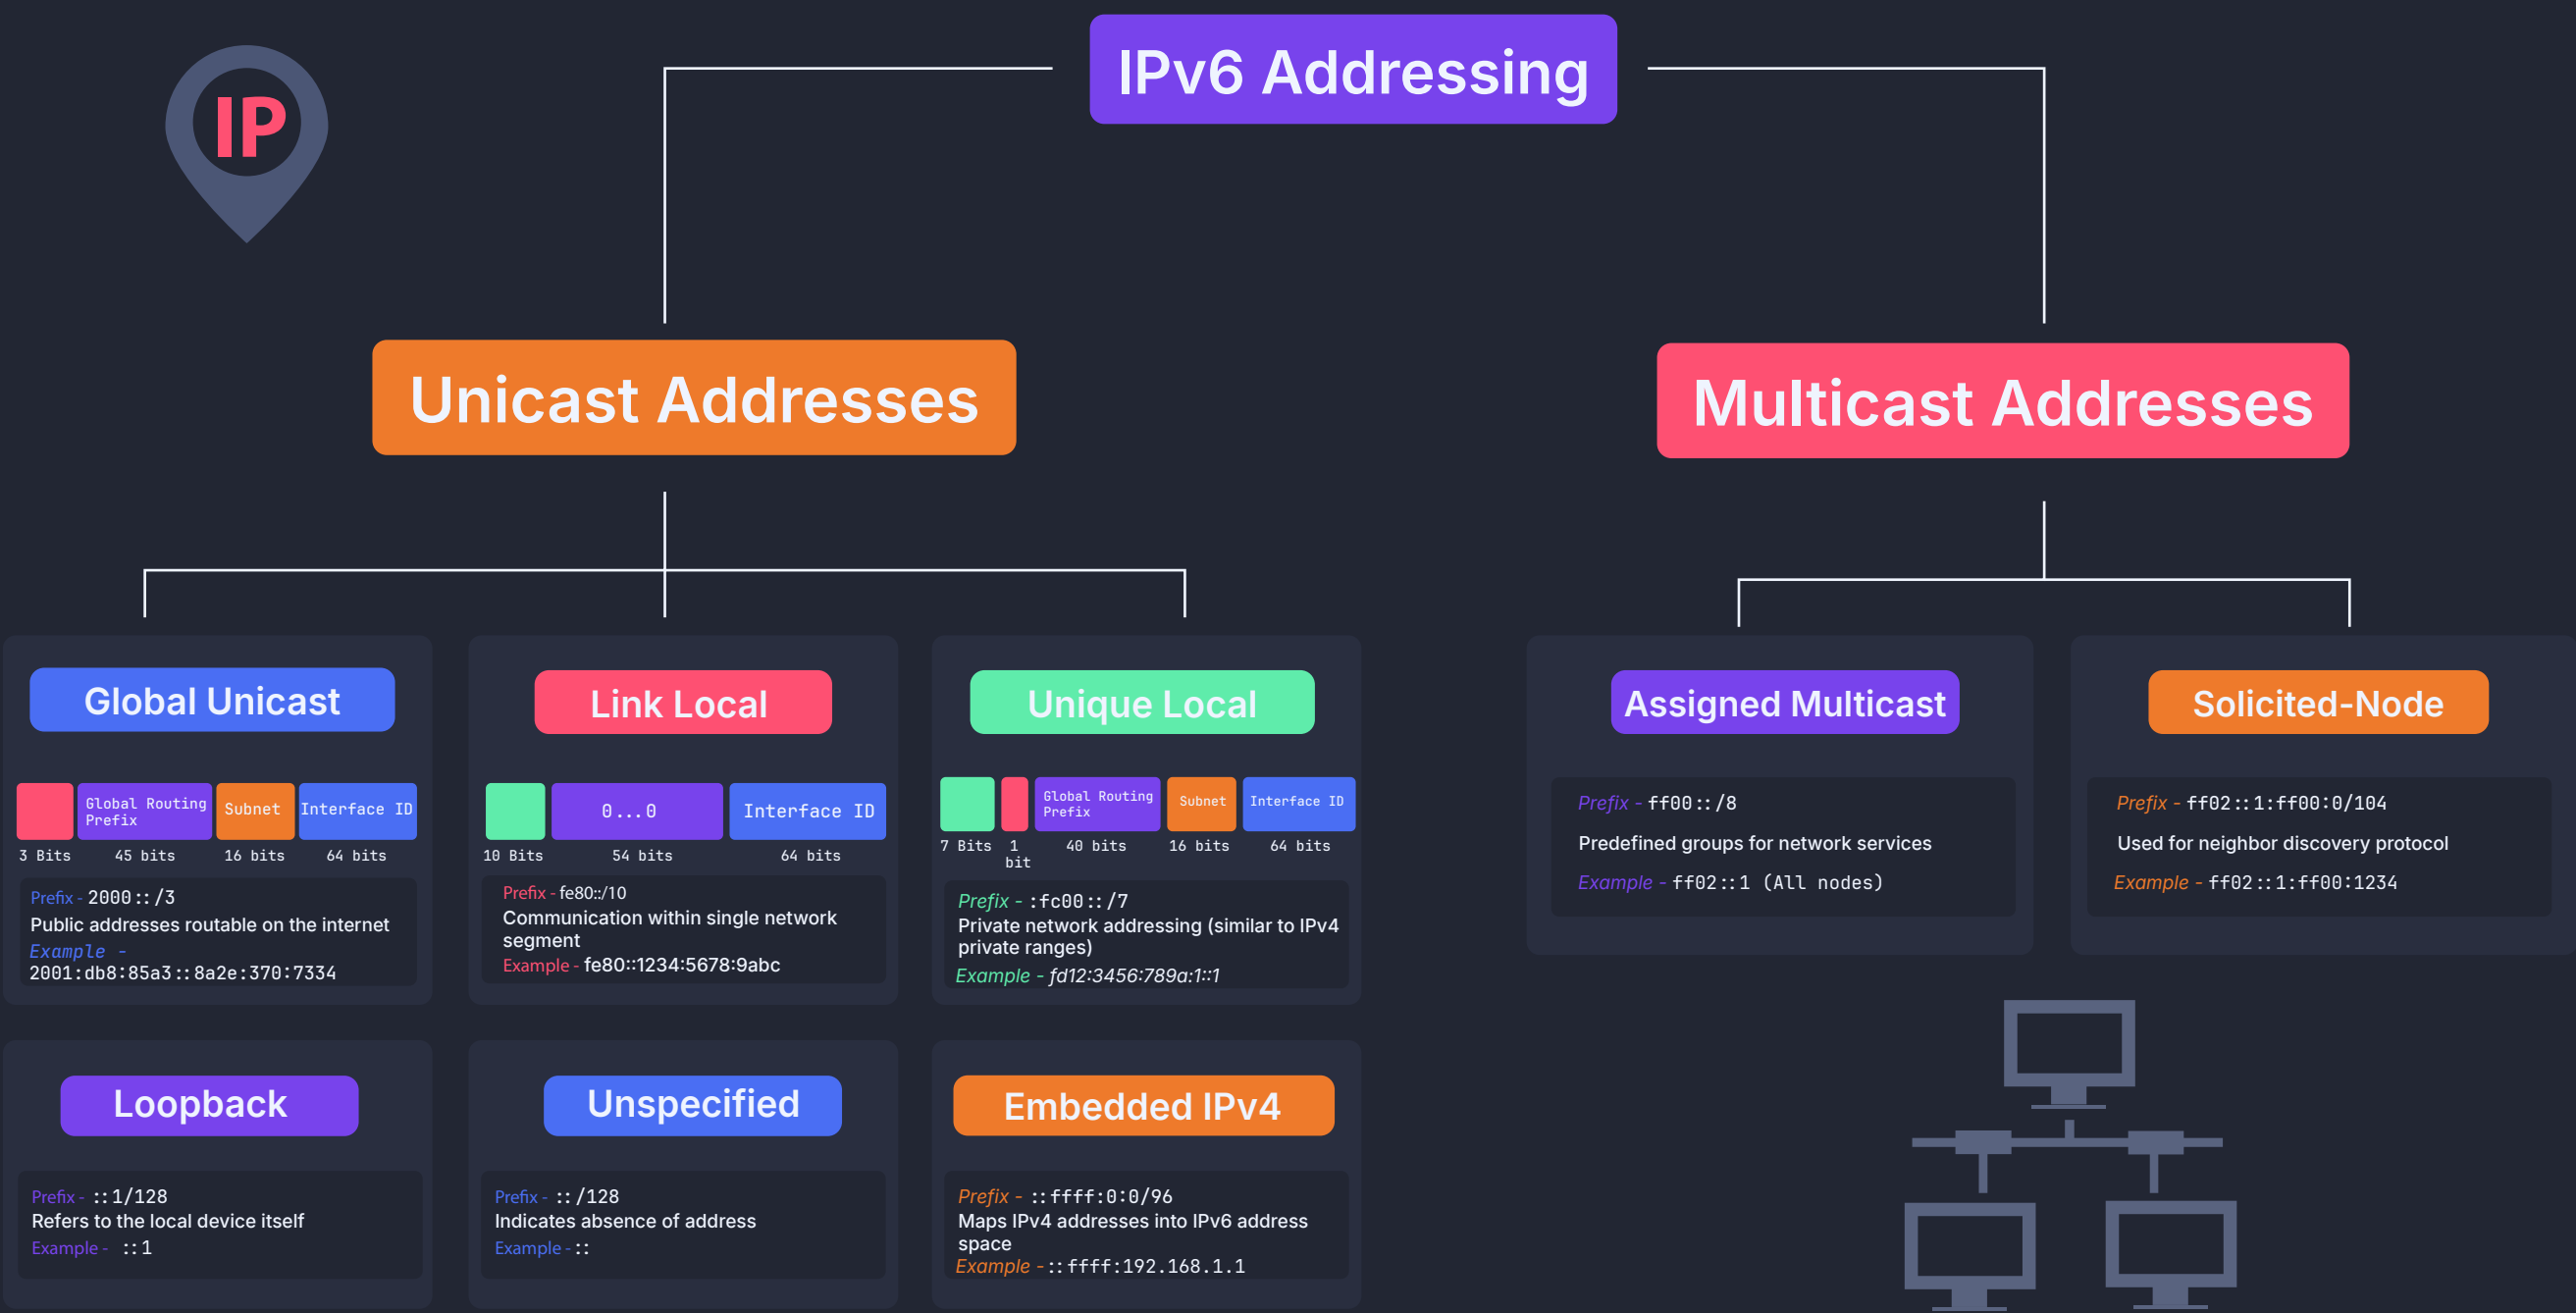

Important Notes

- IPv6 has no broadcast addresses (unlike IPv4)
- Anycast addresses are syntactically identical to unicast addresses
- Leading zeros in any 16-bit field can be omitted
- Consecutive fields of zeros can be replaced with :: (but only once in an address)

Common Reserved Multicast Addresses

- ff02::1 - All nodes on the local network segment
- ff02::2 - All routers on the local network segment
- ff02::5 - All OSPF routers
- ff02::1:2 - All DHCP servers/relays